

C7 CAR TRANSFER STRAIGHT TRANSFER BOARD

1 Adjust car seat to maximise available space for transfer.

(e.g. Move seat backwards and recline backrest)

Position wheelchair next to seat; apply brakes.


Remove armrests and footplates closest to the car.

Lean to side and position transfer board underneath buttock, and across to chair.



2 Place hand flat on far end of transfer board.

Shuffle sideways across board in small movements.

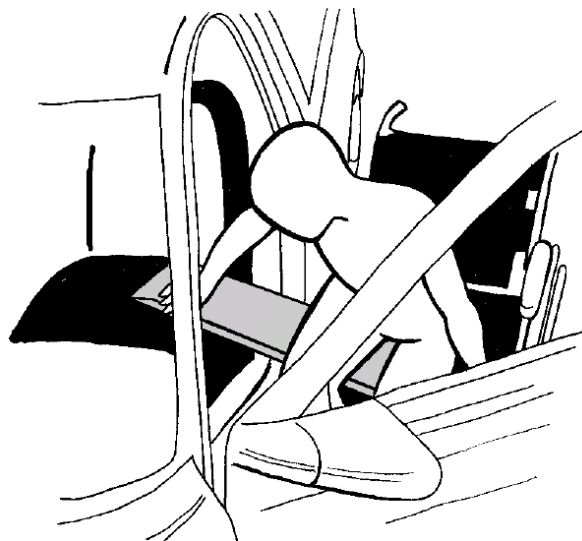

3 Move legs into foot well of car when it is comfortable to do so.

Remove transfer board.



- N.B.**
- Care must be taken not to trap fingers under transfer board.
 - Two surfaces should be approximately the same height.