


SUPPORT TYPE SLING – uncrossed Central Straps

FITTING INSTRUCTIONS


SEATED POSITION

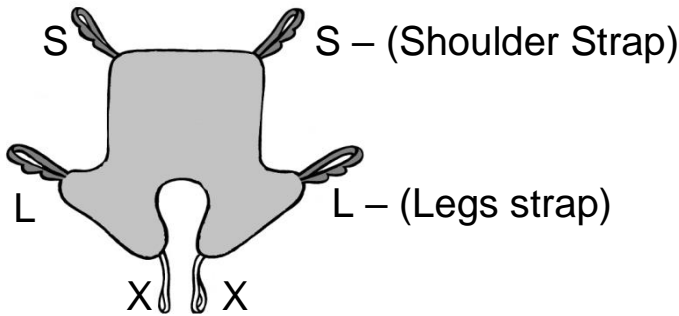

FITTING SLING FROM SEATED POSITION


1

Person to lean forward, slide the sling down the back of the person with the aperture tucked slightly under bottom. Top of the sling should be across the shoulders. Labels must be on the outside.

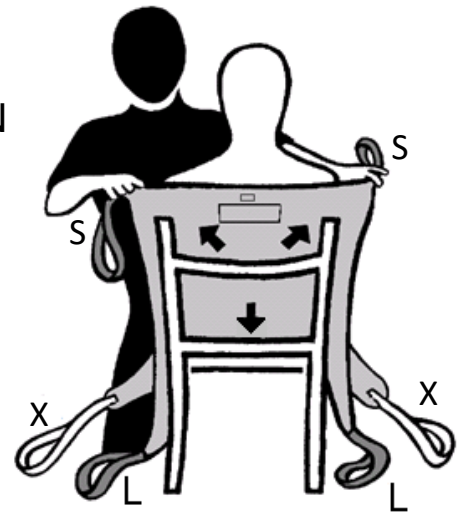


2

Person to lean to one side.
Carer to move leg section of sling underneath thigh.
Repeat for other leg.

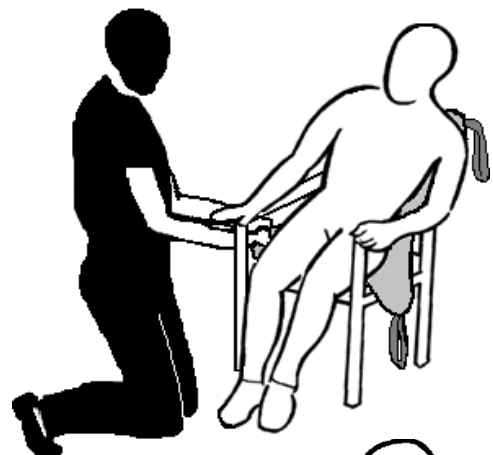

3

Bring leg strap X through to the front and under legs. Ensuring the sling remains under the buttocks.

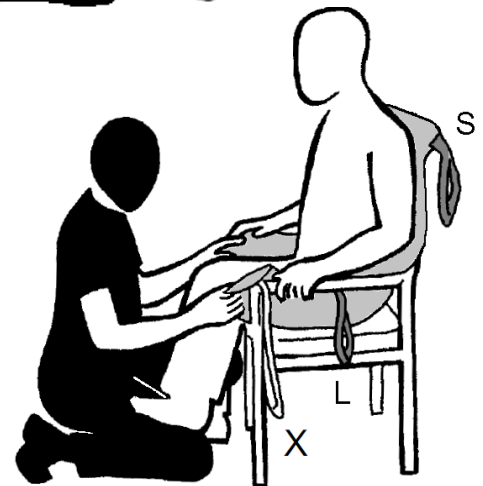

N.B. • It may be easier to place the person's foot on the carer's thigh in order to do this.

SUPPORT TYPE SLING – uncrossed Central Straps

FITTING INSTRUCTIONS

SEATED POSITION

4 Take **left** leg strap (L) and pass it through the **Left X** strap.

5 Take **right** leg strap (L) and pass it through **right X** strap.

ATTACHING SLING TO HOIST

6 Connect both leg straps (L) onto spreader bar hooks.


(Refer to Moving and Handling Care Plan (MHCP) for recommended loops)

7 Connect both shoulder straps (S) onto spreader bar hooks.

(Refer to MHCP for recommended loops)

8 Ensure all sling straps are secure.
Operate the hoist.

As the hoist starts to lift, **stop and check** the sling is comfortable before fully lifting; ensure that the leg straps do not ride up and cut into groin area.

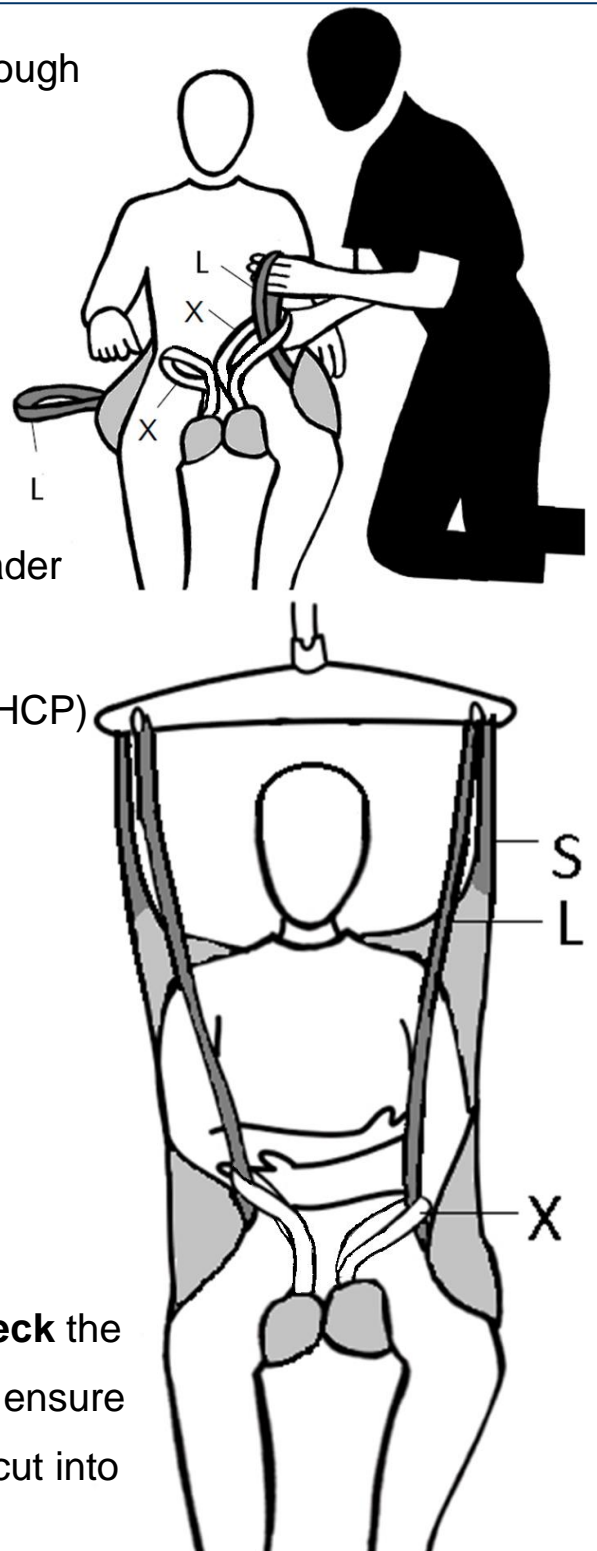

- N.B.**
- Ensure that labels and handle(s) are on the outside of the sling.
 - **Never connect X straps to lifting bar**